

Specifications

Spezifikationen | Specifiche | Caractéristiques techniques | Especificaciones | 仕様

Model	UT3201
Battery Capacity	10000mAh
Charging Time	3hrs
Input	5V/3A 9V/2A 12V/1.5A
Output	5V/3A 9V/2.22A 10V/2.25A
Dimensions(cm)	12 * 6.3 * 3
Weight	225g

Warning / Attention

Warnung | Avertissement | Avvertimento | Advertencia | 警告
Achtung | Attenzione | Attention | Atención | 注意



Avoid dropping

Nicht herunterfallen lassen | Evitare di far cadere | Éviter les chutes | Evitar las caídas libres | 落とさないようにしてください



Avoid low-temperature burns

Verbrennungen bei niedrigen Temperaturen vermeiden
Evitare ustioni anche a bassa temperatura
Éviter les brûlures à basse température
Evitar quemaduras por baja temperatura
低温火傷を起こさないようにしてください



Avoid kids using it without adult supervision

Verwendung durch Kinder ohne Erwachsenenaufsicht vermeiden
Evitare che i bambini lo usino senza la supervisione di un adulto
Éviter que les enfants ne l'utilisent en l'absence d'un adulte
Evitar que los niños lo utilicen sin la supervisión de un adulto
大人の監視なくお子様が使用しないようにしてください



Avoid extreme temperatures

Extreme Temperaturen vermeiden
Evitare temperature estreme
Éviter les températures extrêmes
Evitar las temperaturas extremas
極端な温度は避けてください



Don't disassemble

Nicht auseinanderbauen | Non smontare | Ne pas démonter | No desmontar | 分解しないでください



Don't expose to liquids

Nicht den Flüssigkeiten aussetzen
Non esporre a liquidi
Ne pas exposer aux liquides
No exponer a líquidos
液体に晒さないでください



Read Instruction Manual

Bedienungsanleitung lesen | Leggi il manuale di istruzioni
Lire le manuel d'instructions | Leer manual de instrucciones
取扱説明書を読む



Use original or certified cables

Originale oder zertifizierte Kabel verwenden
Utilizzare solo cavi originali o certificati
Utiliser des câbles originaux ou certifiés
Utilizar cables originales o certificados
ケーブルは純正品または認証品を使用してください



To preserve lifespan recharge every 3 months

Für längere Akku-Lebensdauer mind. alle 3 Monate aufladen
Per garantire una lunga durata della vita utile, ricaricare ogni 3 mesi
Pour préserver la durée de vie, recharger tous les 3 mois
Para preservar la vida útil recargar cada 3 meses
寿命を保つために3カ月に一度、充電してください



To take on a plane consult the airline

Für die Mitnahme im Flugzeug die Fluggesellschaft konsultieren
Nel caso di imbarco su un volo, consultare la compagnia aerea
Pour emporter l'appareil en avion, consulter la compagnie aérienne
Para llevar en avión consultar con la compañía aérea
飛行機に持ち込む場合は、航空会社にご相談ください



WARNING

1. For use only with Listed Class 2 Power Unit.
2. Please use the power cord that comes with the product, never use a charger that is not certified.



WARNUNG

Die oben genannten Warnungen müssen befolgt werden, um mögliche Verletzungen des Benutzers zu verhindern.

Important safety instructions



WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.



AVERTISSEMENT

Lisez tous les avertissements et instructions de sécurité. Le non-respect des avertissements et des instructions peut entraîner un choc électrique, un incendie ou des blessures graves.

• To Reduce the Risk of Injury, close supervision is necessary when the product is used near children.

• Do not put fingers or hands into the product.

• Do not expose power bank to rain or snow.

• Recharge only with the charger specified by the manufacturer. A charger suitable for one type of battery pack may create a risk of fire when used with another battery pack.

• Switch off the power bank when not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

• Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts the eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

• Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

• Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause an explosion.

• Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.

• Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

• Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

• Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.

• Save these instructions for later reference.

Safe battery disposal

• All rechargeable batteries will degrade over time, eventually limiting the ability to retain a charge. This product contains a lithium-ion rechargeable battery pack, which must be disposed of properly when it will no longer retain a charge.

• Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful in some countries. Please collect them separately and properly recycle them under the local regulations.

• For information on recycling this battery:
- Call 2Recycle: Call 1-800-822-8837 or visit www.call2recycle.org. (For the US and CA)
- Contact local, country or state recycling centers for information on proper disposal.



Customer service

Kundenservice | Assistenza clienti | Service Après Vente | Servicio de atención al cliente | カスタマーサービス

US: 12-month limited warranty
AU: 12-month limited warranty
CA: 12-month limited warranty
UK: 24-month limited warranty
DE: 24 Monate begrenzte Garantie
IT: Garanzia limitata di 24 mesi
FR: Garantie limitée de 24 mois
ES: Garantía limitada de 24 meses
JP: 12カ月の限定保証

Ocoopa

Union Series

UT4 Extreme


User manual

Benutzerhandbuch | Manuale d'uso | Manuel d'utilisateur
Manual del usuario | 取扱説明書

A PALM OF WARMTH

UT3201

 Button functions

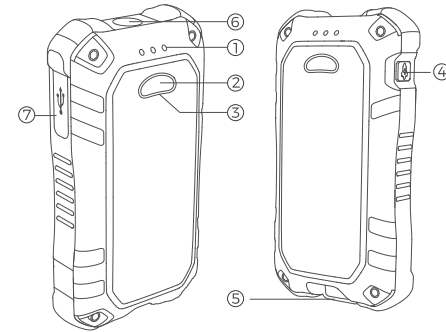

- ① Battery Indicator
- ② Power Button
- ③ LED Status Indicator
- ④ Side Power Button
- ⑤ Strap Mount
- ⑥ Flashlight
- ⑦ USB-A/USB-C

Long press on/off heating

Langes Drücken zum Ein/Ausschalten der Heizung
Premere a lungo per accendere/spgnere il riscaldamento
Appui long pour activer/désactiver le chauffage
Mantenga pulsado para encender/apagar la calefacción
長押しして加熱をオン/オフにする

 
Short press (Side Power Button) on/off Flashlight

Kurzes Drücken (seitliche Einschalttaste) zum Ein- und Ausschalten der Taschenlampe
Pressione breve (pulsante di accensione laterale) per accendere/spgnere la torcia elettrica
Appui court (bouton d'alimentation latéral) pour allumer/éteindre la lampe de poche
Pulsación corta (botón de encendido lateral) encendido/apagado Linterna
短く押す(側面の電源ボタン)フラッシュライトのオン/オフ

Long press (Side Power Button) on/off Extra Heat Mode


Langes Drücken (seitliche Einschalttaste) zum Ein- und Ausschalten des Extra-Heizmodus
Pressione prolungata (pulsante di accensione laterale) per attivare/disattivare la modalità Extra Heat

Appui long (bouton d'alimentation latéral) pour activer/désactiver le mode Extra Heat
Pulsación larga (botón lateral de encendido) on/off Modo Calor Extra
長押し(サイド電源ボタン) オン/オフ 余熱モード

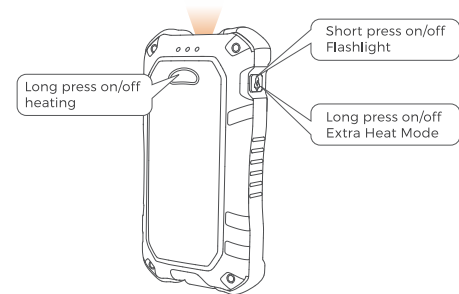

Single press to switch heating level

 Einfaches Drücken zum Umschalten der Heizstufe
Premere una volta per cambiare il livello di riscaldamento
Appui court pour changer de niveau de chauffage
Pulse una vez para cambiar el nivel de calefacción
一回押しして加熱レベルを切替える

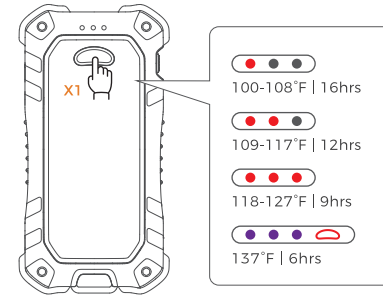


For different surrounding temperature, operation time may vary

Die Betriebszeit kann je nach Umgebungstemperatur variieren
In diverse temperature ambientali, il tempo di funzionamento può variare
La durée de fonctionnement peut varier en fonction de la température ambiante
El tiempo de funcionamiento puede variar al detectar diferentes temperaturas circundantes
周囲温度によって操作時間は異なります

Double press to check battery level

 Doppeltes Drücken zur Überprüfung der Batterie
Premere due volte per controllare lo stato della batteria
Double appui pour vérifier la pile
Pulse dos veces para comprobar la batería
二回押ししてバッテリーをチェックする

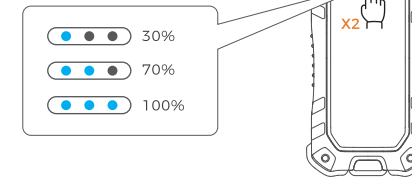


Fast charge (Power Button LED Indicator is green)

Schnelles Laden (LED-Anzeige der Einschalttaste leuchtet grün)
Ricarica rapida (l'indicatore LED del pulsante di alimentazione è verde)
Chargement rapide (l'indicateur LED du bouton d'alimentation est vert)
Carga rápida (el indicador LED del botón de encendido está verde)
急速充電(電源ボタンLEDインジケータが緑色)


Recharging your hand warmer

 Aufladen des Handwärmegerätes
Ricarica dello scaldamani
Recharger votre Chauffe-mains
Recarga del calentamanos
ハンドウォーマーに充電する

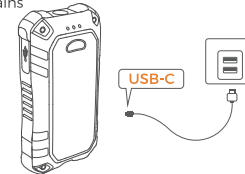

Charge your phone or tablet

 Aufladen Ihres Handys oder Tablets
Ricarica del telefono o tablet
Recharger votre téléphone ou votre tablette
Carga del teléfono o la tableta
携帯やタブレットに充電する

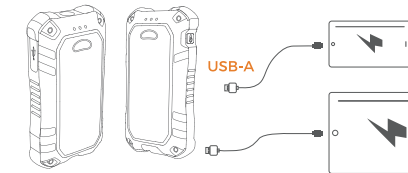

Lifetime technical support

Technischer Support auf Lebenszeit
Supporto tecnico a vita
Assistance technique à vie
Servicio técnico para toda la vida
ライフタイムテクニカルサポート

For FAQs and more information, please visit:



www.ocoopa.com/pages/help-center



support@ocoopa.com